

How to use the PIN-calculator to access internetbank to confirm

1. To turn on the PIN-calculator, press the button marked with a triangle



 
2. The following image will appear on the screen:

Enter the PIN-code.


The first time you use the PIN-calculator the PIN-code will be:

- a) 1234 (if you are asked to enter a four-digit PIN-code)
b) 11111 (if you are asked to enter a five-digit PIN-code)

Once you have entered the PIN-code for the first time you will then have to change it (see "Changing the PIN-calculator's PIN-code" below).



 
3. After you enter the PIN-code you will be asked which programme you wish to use.



4. In private and business internetbank you will need to use Program 1.
Press on button 1



 5. After you have pressed button no. 1, a code will appear on the PIN-calculator screen which must be entered in private and business internetbank



6. The code is displayed for **90 seconds**. After this period the PIN-calculator automatically turns itself off. If you wish to turn it off earlier, press the button marked with the triangle twice.

Changing the PIN-calculator's PIN-code

1. If you would like to change the PIN-code you need to turn on the PIN-calculator, you will need to turn the PIN-calculator on in accordance with the points 1 and 2 of "Using the calculator to access ..." instructions.

The image mentioned in point 3 will then appear. Press the button marked with the triangle and hold it down for 2 seconds



(Hold 2 seconds)

2. The following image will appear on the screen:

The first time you start the PIN-calculator this screen will launch automatically. You then need to enter new PIN-code.

 


3. The following image will appear on the screen:

Enter the selected PIN-code again. Once you have entered the code the same way twice the message "NEW PIN CONF" will appear on the screen. The next time you use the PIN-calculator you will need to enter the new PIN-code.



If you do not enter the new code the same way twice the message "FAIL" will appear on the screen and you will need to start the process again.



Entering the wrong PIN-code

If you enter the wrong PIN-code when you turn the PIN-calculator on, the following message will appear on the screen:

The number on the screen indicates how many times you have entered the wrong code. This message will keep appearing on the screen when you turn the PIN-calculator on until you enter the correct PIN-code.

You can delete the message and re-enter the PIN-code by pressing the button marked with the triangle.



If you enter the wrong PIN-code **5 times**, the PIN-calculator will lock itself and you will not be able to use it. To get new calculator you will need to go to a bank branch.

Changing your PIN calculator

You cannot change the empty batteries of your PIN calculator. Opening the PIN calculator makes it unusable. You can get a new PIN calculator from our branch for an issue fee. When you come to our branch, bring your old PIN calculator and an identity document.
